



UNITY

WATCHES

Warranty - Instructions for use

WARRANTY

UNITY watches are guaranteed for a period of 24 months from the date of purchase according to the terms expressed in the legal conditions published in our web page. During the warranty period, UNITY's guarantee covers defects in material, manufacture and assembly existing at the time of delivering the watch, as well as the repair of any defect completely free of charge. Where repair is not possible to return the watch to its normal conditions of use, UNITY guarantees its substitution for another with identical or similar characteristics. The warranty of the substitute watch will expire 24 months after the purchase date of the substituted watch.

The UNITY warranty does not cover:

The repairs and/or change of components due to wear and aging from the use of the watch (scratched crystals, change in colour and wear of bands, loss of shine of the watch case, repair of scratches on the watch case, etc);

Damage caused by improper use or lack of care (blows, dents, broken crystal, etc.) or through not observing the current instructions for use;

Damage caused in transport if these were not communicated in the terms expressed in the legal conditions;

The time adjustments typical of automatic watches;

Any other alteration of the watch with respect to the original conditions that was not made by UNITY.

Each watch has associated to it a personalized warranty card with a serial no. that is delivered along with the watch. Refer to this serial number for any communication that you wish to send us in relation to the warranty of your watch; to do this we put at your disposal the exclusive channel for our customers through the e-mail address clients@unitywatches.com.

UNITY ensures proper maintenance of your watch through its technical service or the authorized collaborating centres. For any maintenance operation and/or repair that your watch may need, contact us through the e-mail clients@unitywatches.com and we will indicate to you how to proceed in order to guarantee proper attention.

INSTRUCTIONS OF USE AND MAINTENANCE

Care and cleaning

Clean the watch case with a soft cloth periodically, especially in the areas of contact with the skin. Do not use solvents or other chemical products since it could damage the watch and its components. Use a soft-bristle toothbrush to clean the areas where the cloth cannot reach. In case of submerging the watch in sea water, rinse it afterwards in fresh water and dry it with a soft cloth.

Maintenance on your watch is recommended to be performed every four or five years, consistent with the change of the waterproof seal of the back and adjust and lubricate the movement.

For any maintenance operation and/or repair that your watch may need, contact us through the e-mail clients@unitywatches.com and we will indicate to you how to proceed in order to guarantee proper attention

Do not open the back of the watch for any reason; a special key is necessary for this operation and to get and appropriate close of the watch.

Waterproof condition

All UNITY watches are waterproof up to 5 bars (50 metres) with the tightened crown. We remind you that the waterproof condition can decrease with the passing of time, and can even be lost, because of the deterioration of the watch seals, improper handling of the watch or blows to the crown. Do not manipulate the crown under water and be sure it is perfectly tightened before submerging the watch. Do not open the back of the watch for any reason; you can lose the watch's waterproof condition.

Start up

Your watch has automatic winding with a maximum reserve charge of 48 hours, it charges with the movement of the wrist when it is worn. If the watch stops due to lack of winding (it will be detected because the second hand will stop) put it on and after a few minutes, when the

second hand again moves, follow the instructions indicated in "time adjustment".

Adjustment of the date

1. Loosen the crown from the case by turning the crown in an anti-clockwise direction.
2. Gently pull the crown outwards until you notice the first click.
3. Turn the crown in a clockwise direction to adjust the date of the calendar. Do not perform this operation between the hours of 11 p.m. and 1 a.m.
4. Replace the crown in its initial position; press the crown gently towards the case and tighten it in the clockwise direction.

Adjustment of the time

1. Loosen the crown from the case by turning the crown in an anti-clockwise direction.
2. Gently pull the crown outwards until you notice the first click. Pull again until noting the second click. At this point the second hand will stop.
3. Turn the crown in a clockwise direction to adjust the hour hands.
4. Return the crown to its initial position; press the crown towards the case and turn it in a clockwise direction.

Other measures

Do not expose the watch the sudden temperature changes (exposure to sun followed by immersion in water), extreme temperatures (over 60°C or below 0°C) or to magnetic fields.